




ACCESSOIRES / WEBCAMS & VIDEO

# ThinkVision MC50- webcam voor beeldscherm 4XC1D66056

- JAN: 4580550475283
- EAN: 0195892018247
- UPC: 195892018247

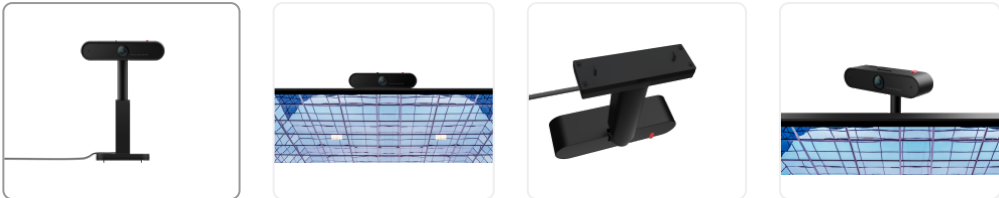

## Features

Product Description	Voeg duidelijkheid toe aan je bedrijfsvisie met de Lenovo ThinkVision MC50 Monitor Webcam. Deze veelzijdige webcam biedt eenvoudige functionaliteit voor uw dagelijkse werkzaamheden wanneer u deze koppelt aan een compatibel beeldscherm. Met zijn 1/2,9-inch RGB-sensor legt de MC50 1080p RGB-video vast voor een kristalhelder beeld. Daarmee is hij geschikt voor elke videovergadering. Dankzij de brede kijkhoek van 90 graden, een draaihoek van -45 tot 225 graden en een kantelhoek van +/- 30 graden omhoog en omlaag krijgt u uw content moeiteloos in beeld. Dankzij Lenovo's gepatenteerde Smart Traffic Light, dat automatisch een klein lampje inschakelt wanneer je een vergadering hebt, en een fysieke cameraschuif, zijn privacyproblemen verleden tijd. De ingebouwde dubbele MC50-microfoon met ruisonderdrukking biedt tot op maar liefst 2 meter afstand helder en betrouwbaar geluid.
Top Features	1080p-webcam met 1/2,9-inch grote sensor levert superscherpe videobeelden Dubbele microfoons met ruisonderdrukking Perfecte verbinding met ThinkVision Monitors. Antidiefstalvergrendelingsfunctionaliteit met een fysieke sleutel Flexibele opstelling door tot +/-30° te kantelen en de camera -45° tot 225° te draaien zodat hij in de positie staat die u nodig hebt

## Specificatie

JAN	4580550475283
EAN	0195892018247
UPC	195892018247

Warranty Type	Customer Replaceable Unit (CRU)
Warranty Period	3 jaar
Other Electrical Specifications	1x Traffic light voor Video/Audio aan/uit
Maximum Relative Humidity (%)	90%
Minimum Relative Humidity (%)	0%
Maximum Operating Temperature	40 graden Celsius
Minimum Operating Temperature	-5 graden Celsius
Hardware Requirements	USB 2.0-interface
Connectivity	Bekabeld
Agency Approvals	CE voor EU/EFTA FCC en ICES voor Noord-Amerika CB (62368 -1) KCC voor Zuid-Korea BSMI voor TW VCCI voor Japan UKR voor Oekraïne SASO voor Saudi-Arabië EAC voor Rusland/CU VCCI voor Japan NOM voor Mexico
Packed Weight	237 g
Packed Dimensions (L x D x H)	150 mm x 126 mm x 58 mm
Package Type	Bruine behuizing
Shipment Group	1 x MC50 Monitor Webcam 1 x toets 1 x startgids 1 x garantie
Included Accessory	Toets
Product Weight	126 g
Height	58 mm
Depth	126 mm

Length	150 mm
Color	Raven Black
Special/Added Features	Privacyschuif om de lens van de webcam fysiek af te dekken
Audio-Video Controls	Video- en microfoonfuncties in- en uitschakelen via de computer
Integrated Microphone	Twee ingebouwde microfoons
Video Coding	MJPEG YUY2
Shooting Angle	Pannen & kantelen
Record Resolution & Frame Rate	640 x 480 bij 30 fps 1280x720 bij 30 fps 1920x1080 bij 30 fps
Capture Resolution	FHD (1920x1080)
Camera Pixel	2,8 µm x 2,8 µm
Camera FOV	DFOV 90°
IO Ports	USB-A
Power Input	5 V, 150 mA
Supported OS	Microsoft Windows 7, Windows 10, Windows 10 Home in S-modus, Windows 10 Pro, Windows 10 Home Single Language 64
Brand	ThinkVision

Compatibility

Operating System

OS Independent

Compatibele apparaten

Beschrijving	ID	Voetnoot
ThinkCentre M710s-10M7	10M7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

ThinkCentre M710s-10M8	10M8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M710t-10M9	10M9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M710t-10MA	10MA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M715s-10MB	10MB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M715s-10MC	10MC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M715t-10MD	10MD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M715t-10ME	10ME	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M910s-10MK	10MK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M910s-10ML	10ML	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M910t-10MM	10MM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M910t-10MN	10MN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M710q-10MQ	10MQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M710q-10MR	10MR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M710q-10MS	10MS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M710q-10MT	10MT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M910q-10MU	10MU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

ThinkCentre M910q-10MV	10MV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M910q-10MW	10MW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M910q-10MX	10MX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M910x-10MY	10MY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M910x-10N0	10N0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M910x-10N1	10N1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M910x-10N2	10N2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M710q-10N3	10N3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M910q-10N4	10N4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V320-10N6	10N6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V525-10N7	10N7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V525-10N8	10N8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M910t-10N9	10N9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M910s-10NA	10NA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M710t-10NB	10NB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M710s-10NC	10NC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

Lenovo V520-10NK	10NK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V520s-10NM	10NM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V520s-10NN	10NN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M910z-10NR	10NR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M910z-10NS	10NS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M910z-10NT	10NT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M910z-10NU	10NU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M910z-10NV	10NV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M910z-10NW	10NW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M810z-10NX	10NX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M810z-10NY	10NY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M810z-10Q0	10Q0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M810z-10Q1	10Q1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M810z-10Q2	10Q2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V310z-10QG	10QG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V310z-10QH	10QH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

ThinkCentre M710t-10QK	10QK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M910t-10QL	10QL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M910s-10QM	10QM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M910q-10QN	10QN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M910x-10QQ	10QQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M710q-10QR	10QR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M710s-10QT	10QT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V410z-10QV	10QV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V410z-10QW	10QW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M910x-10R4	10R4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V410z-10R5	10R5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V410z-10R6	10R6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M715q-10RA	10RA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M715q-10RC	10RC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M715q-10RD	10RD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M920q-10RR	10RR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility



ThinkCentre M920q-10RS	10RS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M920q-10RT	10RT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M920q-10RU	10RU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V130-20IGM AIO-10RX	10RX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M920x-10S0	10S0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M920x-10S1	10S1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M920x-10S2	10S2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M920x-10S3	10S3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M920z-10S6	10S6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M920z-10S7	10S7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M820z-10SC	10SC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M820z-10SD	10SD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M920t-10SF	10SF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M920t-10SG	10SG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M920s-10SJ	10SJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M920s-10SK	10SK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility



ThinkCentre M720t-10SQ	10SQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M720t-10SR	10SR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M720t-10SS	10SS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M720s-10ST	10ST	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M720s-10SU	10SU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M720s-10SV	10SV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M720q-10T7	10T7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M720q-10T8	10T8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M720q-10T9	10T9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M720q-10TA	10TA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M720q-10TC	10TC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M625q-10TF	10TF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M625q-10TG	10TG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M625q-10TH	10TH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M625q-10TJ	10TJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M625q-10TK	10TK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

ThinkCentre M625q-10TL	10TL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V330-15IGM Desktop-10TS	10TS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V530-15ICB Desktop-10TV	10TV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V530-15ICB Desktop-10TW	10TW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V530S-07ICB Desktop-10TX	10TX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V530S-07ICB Desktop-10TY	10TY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M920t-10U0	10U0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M920t-10U1	10U1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M920s-10U2	10U2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M920s-10U3	10U3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V330-20ICB AIO-10UK	10UK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V330-20ICB AIO-10UL	10UL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M710e-10UQ	10UQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M710e-10UR	10UR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V530-22ICB AIO-10US	10US	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V530-22ICB AIO-10UT	10UT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

Lenovo V530-22ICB AIO-10UU	10UU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V530-22ICB AIO-10UV	10UV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V530-24ICB AIO-10UW	10UW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V530-24ICB AIO-10UX	10UX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M625q-10UY	10UY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M625q-10V0	10V0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M625q-10V1	10V1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M625q-10V2	10V2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V530-15ARR Desktop-10V3	10V3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M920q-10V8	10V8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M715q-10VG	10VG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M715q-10VH	10VH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M715q-10VJ	10VJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M715q-10VK	10VK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M715q-10VL	10VL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M715q-10VM	10VM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

ThinkCentre M715q-10VN	10VN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M715q-10VQ	10VQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M725s-10VT	10VT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M725s-10VU	10VU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V530-15ARR Desktop-10Y3	10Y3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M630e-10YM	10YM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V540-24IWL AIO-10YS	10YS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75q-1-11A4	11A4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75q-1-11A5	11A5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75q-1-11A6	11A6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75q-1-11A7	11A7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75s-1-11A9	11A9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75s-1-11AA	11AA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90n-1-11AD	11AD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90n-1-11AE	11AE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90n-1-11AF	11AF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

ThinkCentre M90n-1-11AG	11AG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90n-1-11AH	11AH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90n-1-11AJ	11AJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90n-1-11AK	11AK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90n-1-11AM	11AM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90n-1-11AS	11AS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75s-1-11AV	11AV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75s-1-11AW	11AW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre E76x-11BA	11BA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre E96x-11BB	11BB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M720e-11BD	11BD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M720e-11BE	11BE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V530-15ICR Desktop-11BG	11BG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V530-15ICR Desktop-11BH	11BH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V530S-07ICR Desktop-11BL	11BL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V530S-07ICR Desktop-11BM	11BM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

ThinkCentre E76p-11BR	11BR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75n-11BS	11BS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75n-11BT	11BT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75n-11BU	11BU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75n-11BV	11BV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75n-11BW	11BW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75n-11BX	11BX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V55t-15API-11CB	11CB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V55t-15API-11CC	11CC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90a-11CD	11CD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90a-11CE	11CE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70a-11CK	11CK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70a-11CL	11CL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90q-11CR	11CR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M80t-11CS	11CS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M80t-11CT	11CT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility



ThinkCentre M80s-11CU	11CU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M80s-11CV	11CV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90t-11CY	11CY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90t-11D0	11D0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90s-11D1	11D1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90s-11D2	11D2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90t-11D4	11D4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90t-11D5	11D5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90s-11D6	11D6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90s-11D7	11D7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70t-11D9	11D9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70t-11DA	11DA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70s-11DB	11DB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70s-11DC	11DC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90q-11DG	11DG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90q-11DH	11DH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility



ThinkCentre M90q-11DJ	11DJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90q-11DK	11DK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90q-11DL	11DL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M80q-11DN	11DN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M80q-11DQ	11DQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M80q-11DR	11DR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M80q-11DS	11DS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70q-11DT	11DT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70q-11DU	11DU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70q-11DV	11DV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70q-11DW	11DW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90a-11DY	11DY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90a-11E0	11E0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70a-11E2	11E2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70a-11E3	11E3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V50t-13IMB-11EC	11EC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

Lenovo V50t-13IMB-11ED	11ED	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V50s-07IMB-11EE	11EE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V50s-07IMB-11EF	11EF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M80t-11EK	11EK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M80t-11EL	11EL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M80s-11EM	11EM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M80s-11EN	11EN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70t-11EU	11EU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70t-11EV	11EV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70s-11EW	11EW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70s-11EX	11EX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90q-11EY	11EY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90q-11F0	11F0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V50a-24IMB-11FJ	11FJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V50a-24IMB-11FK	11FK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V50a-24IMB-11FL	11FL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

Lenovo V50a-24IMB-11FM	11FM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V50a-22IMB-11FN	11FN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V50a-22IMB-11FQ	11FQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V50a-22IMB-11FR	11FR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V50a-22IMB-11FS	11FS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V30a-24IML-11FT	11FT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V30a-24IML-11FU	11FU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V30a-22IML-11FV	11FV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V30a-22IML-11FW	11FW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75n-11G4	11G4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75n-11G5	11G5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75n-11G6	11G6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75n-11G7	11G7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70c-11GJ	11GJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70c-11GK	11GK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70c-11GL	11GL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

ThinkCentre M70c-11GM	11GM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75n-11GW	11GW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75n-11GX	11GX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V50s-07IMB-11HA	11HA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V50s-07IMB-11HB	11HB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V50t-13IMB-11HC	11HC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V50t-13IMB-11HD	11HD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V35s-07ADA-11HE	11HE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V35s-07ADA-11HF	11HF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V35s-07ADA-11HQ	11HQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V35s-07ADA-11HR	11HR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75s Gen 2-MT	11JA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
	11JB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
	11JC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
	11JD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75q Gen 2-11JJ	11JJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

ThinkCentre M75q Gen 2-11JK	11JK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75q Gen 2-11JL	11JL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75q Gen 2-11JM	11JM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75q Gen 2-11JN	11JN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75q Gen 2-11JQ	11JQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75q Gen 2-11JR	11JR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75q Gen 2-11JS	11JS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90a Gen 2-11JY - ThinkCentre M90a Gen 2	11JY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90a Gen 2-11K0 - ThinkCentre M90a Gen 2	11K0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90a Gen 2-11K1 - ThinkCentre M90a Gen 2	11K1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90a Gen 2-11K2 - ThinkCentre M90a Gen 2	11K2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70a Gen 2-11K3 - ThinkCentre M70a Gen 2	11K3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70a Gen 2-11K4 - ThinkCentre M70a Gen 2	11K4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70a Gen 2-11K5 - ThinkCentre M70a Gen 2	11K5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70a Gen 2-11K6 - ThinkCentre M70a Gen 2	11K6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75t Gen 2-11KB	11KB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

ThinkCentre M75t Gen 2-11KC	11KC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75t Gen 2-11KD	11KD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75t Gen 2-11KE	11KE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V55t-15ARE-11KF	11KF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V55t-15ARE-11KG	11KG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V55t-15ARE-11KH	11KH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V55t-15ARE-11KJ	11KJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90t Gen 2-11L0 - ThinkCentre M90t Gen 2	11L0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90t Gen 2-11L1 - ThinkCentre M90t Gen 2	11L1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90s Gen 2-11L2 - ThinkCentre M90s Gen 2	11L2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90s Gen 2-11L3 - ThinkCentre M90s Gen 2	11L3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90t Gen 2-11L4 - ThinkCentre M90t Gen 2	11L4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90t Gen 2-11L5 - ThinkCentre M90t Gen 2	11L5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90s Gen 2-11L6 - ThinkCentre M90s Gen 2	11L6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90s Gen 2-11L7 - ThinkCentre M90s Gen 2	11L7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V30a-24IIL-11LA	11LA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility



Lenovo V30a-24IIL-11LB	11LB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V30a-22IIL-11LC	11LC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V30a-22IIL-11LD	11LD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M60e-11LU	11LU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M60e-11LV	11LV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M60e-11LW	11LW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M60e-11LX	11LX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M60e-11LY	11LY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M60e-11M0	11M0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M60e-11M1	11M1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M60e-11M2	11M2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70t Gen 2-11M3	11M3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70t Gen 2-11M4	11M4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70s Gen 2-11M5	11M5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70s Gen 2-11M6	11M6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70t Gen 2-11M7	11M7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility



ThinkCentre M70t Gen 2-11M8	11M8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70s Gen 2-11M9	11M9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70s Gen 2-11MA	11MA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90a Gen 2-11MN - ThinkCentre M90a Gen 2	11MN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90q Gen 2-11MQ - ThinkCentre M90q Gen 2	11MQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90q Gen 2-11MR - ThinkCentre M90q Gen 2	11MR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90q Gen 2-11MU - ThinkCentre M90q Gen 2	11MU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90q Gen 2-11MV - Thinkcentre M90q Gen 2	11MV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70q Gen 2-11MY - ThinkCentre M70q Gen 2	11MY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70q Gen 2-11N0 - ThinkCentre M70q Gen 2	11N0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70q Gen 2-11N3 - ThinkCentre M70q Gen 2	11N3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70q Gen 2-11N4 - ThinkCentre M70q Gen 2	11N4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkEdge SE30-11NA - ThinkEdge SE30	11NA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkEdge SE30-11NB - ThinkEdge SE30	11NB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V50t Gen 2-13IOB-11QB - Lenovo V50t Gen 2-13IOB	11QB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V50t Gen 2-13IOB-11QC - Lenovo V50t Gen 2-13IOB	11QC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

Lenovo V50t Gen 2-13IOB-11QD - Lenovo V50t Gen 2-13IOB	11QD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V50t Gen 2-13IOB-11QE - Lenovo V50t Gen 2-13IOB	11QE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre E98-11QF - ThinkCentre E98	11QF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75s Gen 2-11R7 - ThinkCentre M75s Gen 2	11R7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75s Gen 2-11R8 - ThinkCentre M75s Gen 2	11R8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75s Gen 2-11R9 - ThinkCentre M75s Gen 2	11R9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75s Gen 2-11RA - ThinkCentre M75s Gen 2	11RA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75t Gen 2-11RB - ThinkCentre M75t Gen 2	11RB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75t Gen 2-11RC - ThinkCentre M75t Gen 2	11RC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75t Gen 2-11RD - ThinkCentre M75t Gen 2	11RD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M75t Gen 2-11RE - ThinkCentre M75t Gen 2	11RE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkEdge SE50-11RH - ThinkEdge SE50	11RH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkEdge SE50-11RJ - ThinkEdge SE50	11RJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V55t Gen 2-13ACN-11RM - Lenovo V55t Gen 2-13ACN	11RM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V55t Gen 2-13ACN-11RN - Lenovo V55t Gen 2-13ACN	11RN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V55t Gen 2-13ACN-11RQ - Lenovo V55t Gen 2-13ACN	11RQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

Lenovo V55t Gen 2-13ACN-11RR - Lenovo V55t Gen 2-13ACN	11RR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre E700-ThinkCentre E700IAB	11SB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre neo 50t Gen 3-11SC - ThinkCentre neo 50t Gen 3	11SC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre neo 50t Gen 3-11SD - ThinkCentre neo 50t Gen 3	11SD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre neo 50t Gen 3-11SE - ThinkCentre neo 50t Gen 3	11SE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre neo 50t Gen 3-11SF - ThinkCentre neo 50t Gen 3	11SF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre neo 50s Gen 3-11SW - ThinkCentre neo 50s Gen 3	11SW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre neo 50s Gen 3-11SX - ThinkCentre neo 50s Gen 3	11SX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre neo 50s Gen 3-11SY - ThinkCentre neo 50s Gen 3	11SY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre neo 50s Gen 3-11T0 - ThinkCentre neo 50s Gen 3	11T0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70q Gen 3-11T3- ThinkCentre M70q Gen 3	11T3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70q Gen 3-11T4- ThinkCentre M70q Gen 3	11T4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70t Gen 3-11T5- ThinkCentre M70t Gen 3	11T5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70t Gen 3-11T6- ThinkCentre M70t Gen 3	11T6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70s Gen 3-11T7- ThinkCentre M70s Gen 3	11T7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70s Gen 3-11T8- ThinkCentre M70s Gen 3	11T8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility



ThinkCentre M90t Gen 3-11TU- ThinkCentre M90t Gen 3	11TU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90t Gen 3-11TV- ThinkCentre M90t Gen 3	11TV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90s Gen 3-11TW- ThinkCentre M90s Gen 3	11TW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90s Gen 3-11TX- ThinkCentre M90s Gen 3	11TX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70q Gen 3-11TY- ThinkCentre M70q Gen 3	11TY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70q Gen 3-11U0- ThinkCentre M70q Gen 3	11U0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M80q Gen 3-11U1- ThinkCentre M80q Gen 3	11U1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M80q Gen 3-11U2- ThinkCentre M80q Gen 3	11U2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M80q Gen 3-11U3- ThinkCentre M80q Gen 3	11U3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M80q Gen 3-11U4- ThinkCentre M80q Gen 3	11U4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90q Gen 3-11U5- ThinkCentre M90q Gen 3	11U5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90q Gen 3-11U6- ThinkCentre M90q Gen 3	11U6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90q Gen 3-11U7- ThinkCentre M90q Gen 3	11U7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90q Gen 3-11U8- ThinkCentre M90q Gen 3	11U8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90a Pro Gen3- 11VA-ThinkCentre M90a Pro Gen3	11VA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90a Pro Gen3- 11VB-ThinkCentre M90a Pro Gen3	11VB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility



ThinkCentre M90a Pro Gen3-11VC-ThinkCentre M90a Pro Gen3	11VC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90a Pro Gen3-11VD-ThinkCentre M90a Pro Gen3	11VD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90a Pro Gen3-11VE-ThinkCentre M90a Pro Gen3	11VE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90a Gen 3-11VF-ThinkCentre M90a Gen 3	11VF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90a Gen 3-11VG-ThinkCentre M90a Gen 3	11VG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90a Gen 3-11VH-ThinkCentre M90a Gen 3	11VH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90a Gen 3-11VJ-ThinkCentre M90a Gen 3	11VJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70a Gen 3-11VL-ThinkCentre M70a Gen 3	11VL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70a Gen 3-11VM-ThinkCentre M70a Gen 3	11VM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70a Gen 3-11VN-ThinkCentre M70a Gen 3	11VN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70a Gen 3-11VQ-ThinkCentre M70a Gen 3	11VQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V55t Gen 2-13ACN-11VS-Lenovo V55t Gen 2-13ACN	11VS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V55t Gen 2-13ACN-11VT-Lenovo V55t Gen 2-13ACN	11VT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V55t Gen 2-13ACN-11VU-Lenovo V55t Gen 2-13ACN	11VU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V55t Gen 2-13ACN-11VV-Lenovo V55t Gen 2-13ACN	11VV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70q Gen 3-11X2-ThinkCentre M70q Gen 3	11X2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

ThinkCentre M70t Gen 3-11X3- ThinkCentre M70t Gen 3	11X3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70q Gen 3-11X6- ThinkCentre M70q Gen 3	11X6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70s Gen 3-11X8- ThinkCentre M70s Gen 3	11X8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70t Gen 3-11XE- ThinkCentre M70t Gen 3	11XE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M70s Gen 3-11XG- ThinkCentre M70s Gen 3	11XG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M80q Gen 3-Machine Type	11XH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
	11XJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
	11XK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
	11XL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre neo 70t Gen 3-11YT- ThinkCentre neo 70t Gen 3	11YT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre neo 70t Gen 3-11YU- ThinkCentre neo 70t Gen 3	11YU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre E77s-12A4- ThinkCentre E77s	12A4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkEdge SE70-12A6 - ThinkEdge SE70	12A6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkEdge SE70-12A7 - ThinkEdge SE70	12A7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkEdge SE70-12A8 - ThinkEdge SE70	12A8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkEdge SE70-12A9 - ThinkEdge SE70	12A9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility



ThinkEdge SE70-12AA - ThinkEdge SE70	12AA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkEdge SE70-12AB - ThinkEdge SE70	12AB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkEdge SE70-12AE - ThinkEdge SE70	12AE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkEdge SE70-12AF - ThinkEdge SE70	12AF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre M90a Gen 3-Think Centre M90a Gen 3	12AH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
	12AJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
	12AK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
	12AL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkEdge SE70-12AN - ThinkEdge SE70	12AN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkEdge SE70-12AQ - ThinkEdge SE70	12AQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkEdge SE70-12AR - ThinkEdge SE70	12AR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkEdge SE70-12AS - ThinkEdge SE70	12AS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkEdge SE70-12AT - ThinkEdge SE70	12AT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkEdge SE70-12AU - ThinkEdge SE70	12AU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre E97s-12AY - ThinkCentre E97s	12AY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre neo 30a 24 Gen 3-ThinkCentre neo 30a 24 Gen 3	12B0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

	12B2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre neo 30a 22 Gen 3- ThinkCentre neo 30a 22 Gen 3	12B1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre neo 50a 24 Gen 3- ThinkCentre neo 50a 24 Gen 3	12B6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
	12B7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
	12B8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
	12B9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkCentre neo 30a 27 Gen 3- ThinkCentre neo 30a 27 Gen 3	12CA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
	12CB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V30a 24ITL-Lenovo V30a 24ITL	12D8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V30a 22ITL-Lenovo V30a 22ITL	12D9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad 13 1st Generation-20GJ MT	20GJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad 13 1st Generation-20GK MT	20GK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad 13 1st Generation-20GL MT	20GL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad 13 1st Generation-20GM MT	20GM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T570-20H9 MT	20H9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T570-20HA MT	20HA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

P51s-20HB MT	20HB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P51s-20HC MT	20HC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T470-20HD MT	20HD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T470-20HE MT	20HE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T470s-20HF MT	20HF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T470s-20HG MT	20HG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P51-20HH MT	20HH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P51-20HJ MT	20HJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P71-20HK MT	20HK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P71-20HL MT	20HL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X270-20HM MT	20HM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X270-20HN MT	20HN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Carbon 5th Generation-20HQ MT	20HQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Carbon 5th Generation-20HR MT	20HR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad 11e 4th Generation-20HS MT	20HS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad 11e 4th Generation-20HT MT	20HT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

ThinkPad 11e 4th Generation-20HU MT	20HU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad 11e 4th Generation-20HV MT	20HV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad 11e 4th Generation-20HW MT	20HW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad 11e 4th Generation-20HX MT	20HX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad 11e 4th Generation-20HY MT	20HY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad 11e 4th Generation-20J0 MT	20J0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad 13 2nd Generation-20J1 MT	20J1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad 13 2nd Generation-20J2 MT	20J2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L470-20J4 MT	20J4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L470-20J5 MT	20J5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T470p-20J6 MT	20J6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T470p-20J7 MT	20J7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L570-20J8 MT	20J8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L570-20J9 MT	20J9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
S5-20JA MT	20JA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad X1 Tablet-20JB MT	20JB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

ThinkPad X1 Tablet-20JC MT	20JC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Yoga 2nd Generation-20JD MT	20JD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Yoga 2nd Generation-20JE MT	20JE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Yoga 2nd Generation-20JF MT	20JF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Yoga 2nd Generation-20JG MT	20JG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad Yoga 370-20JH MT	20JH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad Yoga 370-20JJ MT	20JJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T470-20JM MT	20JM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T470-20JN MT	20JN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L570-20JQ MT	20JQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L570-20JR MT	20JR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T470s-20JS MT	20JS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T470s-20JT MT	20JT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L470-20JU MT	20JU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L470-20JV MT	20JV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T570-20JW MT	20JW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

T570-20JX MT	20JX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P51s-20JY MT	20JY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P51s-20K0 MT	20K0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Carbon 5th Generation-20K3 MT	20K3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Carbon 5th Generation-20K4 MT	20K4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X270-20K5 MT	20K5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X270-20K6 MT	20K6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
TP25-20K7 MT	20K7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad X270-20KC MT	20KC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad X270-20KD MT	20KD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X280-20KE MT	20KE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X280-20KF MT	20KF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Carbon 6th Generation-20KG MT	20KG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Carbon 6th Generation-20KH MT	20KH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad A475-20KL MT	20KL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad A475-20KM MT	20KM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility



E480-20KN MT	20KN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E480-20KQ MT	20KQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E580-20KS MT	20KS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E580-20KT MT	20KT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E485-20KU MT	20KU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E585-20KV MT	20KV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Tablet 10-20L3 MT	20L3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Tablet 10-20L4 MT	20L4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T480-WINDU-2.0 20L5 MT	20L5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T480-WINDU-2.0 20L6 MT	20L6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T480s-KOLAR-1.0 20L7 MT	20L7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T480s-KOLAR-1.0 20L8 MT	20L8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T580-20L9 MT	20L9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T580-20LA MT	20LA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P52s-20LB MT	20LB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P52s-20LC MT	20LC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility



X1 Yoga 3rd Generation-RAVEN-3.0 20LD MT	20LD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Yoga 3rd Generation-RAVEN-3.0 20LE MT	20LE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Yoga 3rd Generation-RAVEN-3.0 20LF MT	20LF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Yoga 3rd Generation-RAVEN-3.0 20LG MT	20LG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X380 Yoga-STORM-3.0 20LH MT	20LH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X380 Yoga-STORM-3.0 20LJ MT	20LJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
S1 4th Gen-STORM-3.0 20LK MT	20LK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad 11e 5th Generation-20LM MT	20LM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad 11e 5th Generation-20LN MT	20LN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad 11e 5th Generation-20LQ MT	20LQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad 11e 5th Generation-20LR MT	20LR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L480-20LS MT	20LS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L480-20LT MT	20LT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo MIIX 520-12IKB-20M3 MT	20M3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo MIIX 520-12IKB-20M4 MT	20M4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L380-20M5 MT	20M5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

L380-20M6 MT	20M6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L380-20M7 MT	20M7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L380-20M8 MT	20M8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P52-20M9 MT	20M9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P52-20MA MT	20MA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P72-20MB MT	20MB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P72-20MC MT	20MC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P1-20MD MT	20MD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P1-20ME MT	20ME	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Extreme 1st Generation-20MF MT	20MF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Extreme 1st Generation-20MG MT	20MG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
A485-20MU MT	20MU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
A485-20MV MT	20MV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
A285-20MW MT	20MW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
A285-20MX MT	20MX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T490-20N2 MT	20N2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

T490-20N3 MT	20N3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T590-20N4 MT	20N4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T590-20N5 MT	20N5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E490-20N8 MT	20N8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E490-20N9 MT	20N9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E590-20NB MT	20NB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E590-20NC MT	20NC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E495-20NE MT	20NE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E595-20NF MT	20NF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E490s-20NG MT	20NG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T495-20NJ MT	20NJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T495-20NK MT	20NK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X395-20NL MT	20NL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X395-20NM MT	20NM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X390 Yoga-20NN MT	20NN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X390 Yoga-20NQ MT	20NQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

L390-20NR MT	20NR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L390-20NS MT	20NS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L390-20NT MT	20NT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L390-20NU MT	20NU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T490s-20NX MT	20NX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T490s-20NY MT	20NY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X390-20Q0 MT	20Q0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X390-20Q1 MT	20Q1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L490-20Q5 MT	20Q5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L490-20Q6 MT	20Q6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L590-20Q7 MT	20Q7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L590-20Q8 MT	20Q8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T490-20Q9 MT	20Q9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Carbon 7th Generation-20QD MT	20QD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Carbon 7th Generation-20QE MT	20QE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Yoga 4th Generation-20QF MT	20QF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

X1 Yoga 4th Generation-20QG MT	20QG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T490-20QH MT	20QH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T495s-20QJ MT	20QJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T495s-20QK MT	20QK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P53-20QN MT	20QN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P53-20QQ MT	20QQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P73-20QR MT	20QR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P73-20QS MT	20QS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P1 2nd Generation-20QT MT	20QT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P1 2nd Generation-20QU MT	20QU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Extreme 2nd Generation-20QV MT	20QV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Extreme 2nd Generation-20QW MT	20QW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Carbon 7th Generation-20R1 MT	20R1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Carbon 7th Generation-20R2 MT	20R2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L13 Clam-20R3 MT	20R3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L13 Clam-20R4 MT	20R4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

L13 Yoga-20R5 MT	20R5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L13 Yoga-20R6 MT	20R6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Thinkbook 13s-IWL-MT 20R9	20R9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E14-IML-20RA MT	20RA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E14-IML-20RB MT	20RB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E15-IML-20RD MT	20RD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E15-IML-20RE MT	20RE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P43s-20RH MT	20RH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P43s-20RJ MT	20RJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Thinkbook 14s-IWL-MT 20RM	20RM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ThinkBook 13s-IML-MT 20RR	20RR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ThinkBook 14s-IML-MT 20RS	20RS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ThinkBook 14-IML-MT 20RV	20RV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ThinkBook 15-IML-MT 20RW	20RW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T490-20RX MT	20RX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T490-20RY MT	20RY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility



ThinkPad T14-20S0 MT 2020	20S0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad T14-20S1 MT 2020	20S1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad T14-20S2 MT 2020 HC	20S2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad T14-20S3 MT 2020 HC	20S3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad P14s-20S4 MT 2020	20S4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad P14s-20S5 MT 2020	20S5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad T15-20S6 MT 2020	20S6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad T15-20S7 MT 2020	20S7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Yoga 4th Generation-20SA MT	20SA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Yoga 4th Generation-20SB MT	20SB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X390-20SC MT	20SC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X390-20SD MT	20SD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ThinkBook 14-IIL-MT 20SL	20SL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ThinkBook 15-IIL-MT 20SM	20SM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad P17-20SN MT 2020	20SN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad P17-20SQ MT 2020	20SQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

ThinkPad P15-20ST MT 2020	20ST	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad P15-20SU MT 2020	20SU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X13 Yoga-20SX MT 2020	20SX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X13 Yoga-20SY MT 2020	20SY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad T14s-20T0 MT 2020	20T0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad T14s-20T1 MT 2020	20T1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X13 G1-20T2 MT 2020	20T2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X13 G1-20T3 MT 2020	20T3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P15s 1st Generation-20T4 MT 2020	20T4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P15s 1st Generation-20T5 MT 2020	20T5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E14 2nd Generation-ARE-20T6 MT 2020	20T6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E14 2nd Generation-ARE-20T7 MT 2020	20T7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E15 2nd Generation-ARE-20T8 MT 2020	20T8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E15 2nd Generation-ARE-20T9 MT 2020	20T9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E14 2nd Generation-20TA MT 2020	20TA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E14 2nd Generation-20TB MT 2020	20TB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

E15 G2-20TD MT 2020	20TD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E15 G2-20TE MT 2020	20TE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ThinkBook Plus-MT 20TG	20TG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad P1 3rd Generation-20TH MT 2020	20TH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad P1 3rd Generation-20TJ MT 2020	20TJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Extreme 3rd Generation-20TK MT 2020	20TK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Extreme 3rd Generation-20TL MT 2020	20TL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad T15p-20TM MT 2020	20TM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad T15p-20TN MT 2020	20TN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad P15v-20TQ MT 2020	20TQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad P15v-20TR MT 2020	20TR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad L14-20U1 MT 2020	20U1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad L14-20U2 MT 2020	20U2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad L15-20U3 MT 2020	20U3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad L15-20U4 MT 2020	20U4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L14 AMD G1-20U5 MT 2020	20U5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

L14 AMD G1-20U6 MT 2020	20U6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L15 AMD G1-20U7 MT 2020	20U7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L15 AMD G1-20U8 MT 2020	20U8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Carbon 8th Generation-20U9 MT 2020	20U9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Carbon 8th Generation-20UA MT 2020	20UA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Yoga 5th Generation-20UB MT 2020	20UB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Yoga 5th Generation-20UC MT 2020	20UC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T14 AMD G1-20UD MT 2020	20UD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T14 AMD G1-20UE MT 2020	20UE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X13 AMD G1-20UF MT 2020	20UF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X13 AMD G1-20UG MT 2020	20UG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T14s AMD G1-20UH MT 2020	20UH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T14s AMD G1-20UJ MT 2020	20UJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad P15g-20UR MT 2020	20UR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkPad P15g-20US MT 2020	20US	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
C13 Yoga G1 Chromebook-20UX MT 2020	20UX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

C13 Yoga G1 Chromebook-20UY MT 2020	20UY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ThinkBook 15p-IMH-MT 20V3	20V3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkBook 13s 2nd Generation-ITL-MT 20V9	20V9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkBook 14s 2nd Generation-ITL-MT 20VA	20VA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkBook 14 2nd Generation-ITL-MT 20VD	20VD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkBook 15 2nd Generation-ITL-MT 20VE	20VE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkBook 14 2nd Generation-ARE-MT 20VF	20VF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkBook 15 2nd Generation-ARE-MT 20VG	20VG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L13 Clam 2nd Generation-20VH MT 2020	20VH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L13 Clam 2nd Generation-20VJ MT 2020	20VJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L13 Yoga 2nd Generation-20VK MT 2020	20VK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L13 Yoga 2nd Generation-20VL MT 2020	20VL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P14s 2nd Generation-20VX MT 2021	20VX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P14s 2nd Generation-20VY MT 2021	20VY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T14 2nd Generation-20W0 MT 2021	20W0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T14 2nd Generation-20W1 MT 2021	20W1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

T14 2nd Generation-20W2 MT 2021 HC	20W2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T14 2nd Generation-20W3 MT 2021 HC	20W3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T15 2nd Generation-20W4 - T15 Gen 2	20W4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T15 2nd Generation-20W5 - T15 Gen 2	20W5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P15s 2nd Generation-20W6 - P15s Gen 2	20W6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P15s 2nd Generation-20W7 - P15s Gen 2	20W7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X13 Yoga 2nd Generation-20W8 MT 2021	20W8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X13 Yoga 2nd Generation-20W9 MT 2021	20W9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkBook 13s G2 ARE-MT code	20WC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ThinkBook 14s Yoga ITL-MT 20WE	20WE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkBook Plus G2 ITG-20WH - ThinkBook Plus G2 ITG	20WH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkBook 13x ITG-20WJ - ThinkBook 13x ITG	20WJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X13 G2-20WK - X13 Gen 2	20WK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X13 G2-20WL - X13 Gen 2	20WL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T14s 2nd Generation-20WM - T14s Gen 2	20WM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T14s 2nd Generation-20WN - T14s Gen 2	20WN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility



L14 G2-20X1 - L14 Gen 2	20X1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L14 G2-20X2 - L14 Gen 2	20X2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L15 G2-20X3 - L15 Gen 2	20X3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L15 G2-20X4 - L15 Gen 2	20X4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L14 AMD G2-20X5 - L14 Gen 2	20X5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L14 AMD G2-20X6 - L14 Gen 2	20X6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L15 AMD G2-20X7 - L15 Gen 2	20X7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L15 AMD G2-20X8 - L15 Gen 2	20X8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T14s AMD G2-20XF - T14s AMD Gen 2	20XF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T14s AMD G2-20XG - T14s AMD Gen 2	20XG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X13 AMD G2-20XH - X13 AMD Gen 2	20XH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X13 AMD G2-20XJ - X13 AMD Gen 2	20XJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T14 AMD G2-20XK - T14 AMD Gen 2	20XK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T14 AMD G2-20XL - T14 AMD Gen 2	20XL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Carbon 9th Generation-20XW - X1 Carbon Gen 9	20XW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Carbon 9th Generation-20XX - X1 Carbon Gen 9	20XX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

X1 Yoga 6th Generation-20XY - X1 Yoga Gen 6	20XY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Yoga 6th Generation-20Y0 - X1 Yoga Gen 6	20Y0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P14s AMD G1-20Y1 - P14s AMD Gen 1	20Y1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P14s AMD G1-20Y2 - P14s AMD Gen 1	20Y2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P1 G4-20Y3 - P1 Gen 4	20Y3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P1 G4-20Y4 - P1 Gen 4	20Y4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Extreme G4-20Y5 - X1 Extreme Gen 4	20Y5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Extreme G4-20Y6 - X1 Extreme Gen 4	20Y6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E14 AMD 3rd Generation-20Y7 - E14 AMD Gen 3	20Y7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkBook 13s G3 ACN-20YA - ThinkBook 13s G3 ACN	20YA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E14 AMD 3rd Generation-20YD - E14 AMD Gen 3	20YD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E14 AMD 3rd Generation-20YE - E14 AMD Gen 3	20YE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E14 AMD 3rd Generation-20YF - E14 AMD Gen 3	20YF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E15 AMD 3rd Generation-20YG - E15 AMD Gen 3	20YG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E15 AMD 3rd Generation-20YH - E15 AMD Gen 3	20YH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E15 AMD 3rd Generation-20YJ - E15 AMD Gen 3	20YJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

E15 AMD 3rd Generation-20YK - E15 AMD Gen 3	20YK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkBook 16p G2 ACH-20YM - ThinkBook 16p G2 ACH	20YM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkBook 14p G2 ACH-20YN - ThinkBook 14p G2 ACH	20YN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P15 G2-20YQ - P15 Gen 2	20YQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P15 G2-20YR - P15 Gen 2	20YR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T15g G2-20YS - T15g Gen 2	20YS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T15g G2-20YT - T15g Gen 2	20YT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P17 G2-20YU - P17 Gen 2	20YU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P17 G2-20YV - P17 Gen 2	20YV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P14s AMD G2-21A0 - P14s AMD Gen 2	21A0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P14s AMD G2-21A1 - P14s AMD Gen 2	21A1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkBook 14 3rd Generation - ACL-MT 21A2 ThinkBook 14 G3 ACL	21A2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkBook 14 G3 ITL-21A3 - ThinkBook 14 G3 ITL	21A3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkBook 15 3rd Generation - ACL-MT 21A4 ThinkBook 15 G3 ACL	21A4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkBook 15 G3 ITL-21A5 - ThinkBook 15 G3 ITL	21A5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T15p G2-21A7 - T15p Gen 2	21A7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

T15p G2-21A8 - T15p Gen 2	21A8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P15v G2-21A9 - P15v Gen 2	21A9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P15v G2-21AA - P15v Gen 2	21AA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L13 Clam AMD G2-21AB - L13 Clam Gen 2	21AB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L13 Clam AMD G2-21AC - L13 Clam Gen 2	21AC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L13 Yoga AMD G2-21AD - L13 Yoga Gen 2	21AD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L13 Yoga AMD G2-21AE - L13 Yoga Gen 2	21AE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T14 G3-21AH - T14 Gen 3	21AH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T14 G3-21AJ - T14 Gen 3	21AJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P14s G3-21AK MT 2022	21AK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P14s G3-21AL MT 2022	21AL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkBook 13s G4 IAP-21AR - ThinkBook 13s G4 IAP	21AR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkBook 13s G4 ARB-21AS - ThinkBook 13s G4 ARB	21AS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X13 Yoga G3-21AW - X13 Yoga Gen 3	21AW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X13 Yoga G3-21AX - X13 Yoga Gen 3	21AX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkBook 15p G2 ITH-21B1 - ThinkBook 15p G2 ITH	21B1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

L13 Clam G3-21B3 - L13 Clam Gen 3	21B3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L13 Clam G3-21B4 - L13 Clam Gen 3	21B4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L13 Yoga G3-21B5 - L13 Yoga Gen 3	21B5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L13 Yoga G3-21B6 - L13 Yoga Gen 3	21B6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L13 Clam AMD G3-21B9 - L13 Clam Gen 3	21B9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L13 Clam AMD G3-21BA - L13 Clam Gen 3	21BA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L13 Yoga AMD G3-21BB - L13 Yoga Gen 3	21BB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L13 Yoga AMD G3-21BC - L13 Yoga Gen 3	21BC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X13 G3-21BN - X13 Gen 3	21BN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X13 G3-21BQ - X13 Gen 3	21BQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T14s G3-21BR - T14s Gen 3	21BR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T14s G3-21BS - T14s Gen 3	21BS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P16s G1-21BT - P16s Gen 1	21BT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P16s G1-21BU - P16s Gen 1	21BU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T16 G1-21BV - T16 Gen 1	21BV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T16 G1-21BW - T16 Gen 1	21BW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

X13s G1-21BX - X13s Gen 1	21BX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X13s G1-21BY - X13s Gen 1	21BY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L14 G3-21C1 - L14 Gen 3	21C1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L14 G3-21C2 - L14 Gen 3	21C2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L15 G3-21C3 - L15 Gen 3	21C3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L15 G3-21C4 - L15 Gen 3	21C4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L14 AMD G3-21C5 - L14 Gen 3	21C5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L14 AMD G3-21C6 - L14 Gen 3	21C6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L15 AMD G3-21C7 - L15 Gen 3	21C7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
L15 AMD G3-21C8 - L15 Gen 3	21C8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
C14 G1 Chromebook-21C9 - C14 Gen 1 Chromebook	21C9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
C14 G1 Chromebook-21CA - C14 Gen 1 Chromebook	21CA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Carbon G10-21CB - X1 Carbon Gen 10	21CB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Carbon G10-21CC - X1 Carbon Gen 10	21CC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Yoga G7-21CD - X1 Yoga Gen 7	21CD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Yoga G7-21CE - X1 Yoga Gen 7	21CE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility



T14 AMD G3-21CF - T14 AMD Gen 3	21CF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T14 AMD G3-21CG - T14 AMD Gen 3	21CG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T16 AMD G1-21CH - T16 AMD Gen 1	21CH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T16 AMD G1-21CJ - T16 AMD Gen 1	21CJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P16s AMD G1-21CK - P16s AMD Gen 3	21CK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P16s AMD G1-21CL - P16s AMD Gen 1	21CL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X13 AMD G3-21CM - X13 AMD Gen 3	21CM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X13 AMD G3-21CN - X13 AMD Gen 3	21CN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T14s AMD G3-21CQ - T14s AMD Gen 3	21CQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T14s AMD G3-21CR - T14s AMD Gen 3	21CR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
K14 G1-21CS - K14 Gen 1	21CS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
K14 G1-21CT - K14 Gen 1	21CT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
K14 AMD G1-21CU - K14 Gen 1	21CU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
K14 AMD G1-21CV - K14 Gen 1	21CV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkBook 14 G4+ IAP-21CX - ThinkBook 14 G4+ IAP	21CX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkBook 16 G4+ IAP-21CY - ThinkBook 16 G4+ IAP	21CY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

ThinkBook 14 G4+ ARA-21D0 - ThinkBook 14 G4+ ARA	21D0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkBook 16 G4+ ARA-21D1 - ThinkBook 16 G4+ ARA	21D1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P16 G1-21D6 - P16 Gen 1	21D6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P16 G1-21D7 - P16 Gen 1	21D7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P15v G3-21D8 - P15v Gen 3	21D8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P15v G3-21D9 - P15v Gen 3	21D9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
T15p G3-21DA - T15p Gen 3	21DA	
T15p G3-21DB - T15p Gen 3	21DB	
P1 G5-21DC - P1 Gen 5	21DC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P1 G5-21DD - P1 Gen 5	21DD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Extreme G5-21DE - X1 Extreme Gen 5	21DE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
X1 Extreme G5-21DF - X1 Extreme Gen 5	21DF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkBook 14 G4 IAP-21DH - ThinkBook 14 G4 IAP	21DH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkBook 15 G4 IAP-21DJ - ThinkBook 15 G4 IAP	21DJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkBook 14 G4 ABA-21DK - ThinkBook 14 G4 ABA	21DK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkBook 15 G4 ABA-21DL - ThinkBook 15 G4 ABA	21DL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkBook 14s Yoga G2 IAP-MT 21DM	21DM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

E14 G4-21E3 - E14 Gen 4	21E3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E14 G4-21E4 - E14 Gen 4	21E4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E15 G4-21E6 - E15 Gen 4	21E6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E15 G4-21E7 - E15 Gen 4	21E7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E14 AMD G4-21EB - E14 AMD Gen 4	21EB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E14 AMD G4-21EC - E14 AMD Gen 4	21EC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E15 AMD G4-21ED - E15 AMD Gen 4	21ED	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E15 AMD G4-21EE - E15 AMD Gen 4	21EE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkBook 14p G3 ARH-21EJ - ThinkBook 14p G3 ARH	21EJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkBook 16p G3 ARH-21EK - ThinkBook 16p G3 ARH	21EK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkBook Plus G3 IAP-21EL - ThinkBook Plus G3 IAP	21EL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P15v AMD G3-21EM - P15v AMD Gen 3	21EM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P15v AMD G3-21EN - P15v AMD Gen 3	21EN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkBook 16p NX IAP-21EU - ThinkBook 16p NX IAP	21EU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkBook 16p NX ARH-21EV - ThinkBook 16p NX ARH	21EV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P720-30BA	30BA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

ThinkStation P720-30BB	30BB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P920-30BC	30BC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P920-30BD	30BD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P520-30BE	30BE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P520-30BF	30BF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P320-30BG	30BG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P320-30BH	30BH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P320-30BJ	30BJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P320-30BK	30BK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P520-30BN	30BN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P520-30BP	30BP	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P520-30BQ	30BQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P320-30BR	30BR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P320-30BS	30BS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P320-30BT	30BT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P720-30BU	30BU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

ThinkStation P920-30BV	30BV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P520c-30BX	30BX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P520c-30BY	30BY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P520c-30C0	30C0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P320 Tiny-30C1	30C1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P320 Tiny-30C2	30C2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P320 Tiny-30C3	30C3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P330-30C5	30C5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P330-30C6	30C6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P330-30C7	30C7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P330-30C8	30C8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P330-30C9	30C9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P330-30CA	30CA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P330 Tiny-30CE	30CE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P330 Tiny-30CF	30CF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P330-30CY	30CY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

ThinkStation P330-30D0	30D0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P330-30D1	30D1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P330-30D2	30D2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P330-30D3	30D3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P330-30D4	30D4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P340 Tiny-30DE	30DE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P340 Tiny-30DF	30DF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P340 Tiny-30DG	30DG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P340-30DH	30DH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P340-30DJ	30DJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P340-30DK	30DK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P340-30DL	30DL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P340-30DM	30DM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P340-30DN	30DN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P340 Tiny-30DR	30DR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P340 Tiny-30DS	30DS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility



ThinkStation P620-30E0	30E0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P620-30E1	30E1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P350-30E3	30E3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P350-30E4	30E4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P350-30E5	30E5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P350-30E6	30E6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P350 Tiny-30EF	30EF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P350 Tiny-30EG	30EG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P350 Tiny-30EH	30EH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P350 Tiny-30EJ	30EJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P348-30EQ	30EQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P348-30ER	30ER	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P360 Tiny-30F8	30F8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P360 Tiny-30FA	30FA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P360 Tiny-30FB	30FB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P360 Tiny-30FC	30FC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

ThinkStation P360 Tiny-30FD	30FD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P360 Tiny-30FF	30FF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P360 Tower-30FM	30FM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P360 Tower-30FN	30FN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P360 Tower-30FQ	30FQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P360 Ultra-30G0	30G0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P360 Ultra-30G1	30G1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P360 Ultra-30G2	30G2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P360 Ultra-30G3	30G3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
ThinkStation P360 Ultra-30G4	30G4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
P27h-20-61E9	61E9	
P27q-20-61EA	61EA	
T27h-20-61EC	61EC	
T27q-20-61ED	61ED	
T32h-20-61F1	61F1	
T32p-20-61F2	61F2	
T34w-20-61F3	61F3	
P24h-20-61F4	61F4	

P24q-20-61F5	61F5	
P32p-20-62A2	62A2	
T27h-2L-62B1	62B1	
P24h-2L-62B2	62B2	
P40w-62C1	62C1	
P27u-20-62CB	62CB	
P34w-20-62CC	62CC	
T24m-20-62CD	62CD	
P27h-28-62ED	62ED	
T24m-29-63A5	63A5	
T32q-27-63D5	63D5	
Lenovo YOGA 900-13ISK-MT 80MK	80MK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo YOGA 900S-12ISK-MT 80ML	80ML	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo MIIX 700-12ISK-MT 80QL	80QL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo YOGA 900 Pro-MT 80SD	80SD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad MIIX 510-12ISK-MT 80U1	80U1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo YOGA 900-13ISK2-MT 80UE	80UE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo YOGA 910-14IKB-MT 80VF	80VF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo YOGA 910-14IKB Glass-MT 80VG	80VG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

Lenovo MIIX 720-12IKB-MT 80VV	80VV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo MIIX 710-12IKB-MT 80W1	80W1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 520S-14IKB-MT 80X2	80X2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 320S-14IKB-MT 80X4	80X4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 320S-15IKB-MT 80X5	80X5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo YOGA 720-13IKB-MT 80X6	80X6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo YOGA 720-15IKB-MT 80X7	80X7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad FLEX 5-1470-MT 80XA	80XA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad FLEX 5-1570-MT 80XB	80XB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 720S-14IKB-MT 80XC	80XC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo MIIX 510-12IKB-MT 80XE	80XE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 320-14ISK-MT 80XG	80XG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 320-15ISK-MT 80XH	80XH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 320-17ISK-MT 80XJ	80XJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 320-14IKB-MT 80XK	80XK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 320-15IKB-MT 80XL	80XL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

Lenovo ideapad 320-17IKB-MT 80XM	80XM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 320-15IKB Touch-MT 80XN	80XN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 320-14IAP-MT 80XQ	80XQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 320-15IAP-MT 80XR	80XR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 320-15ABR-MT 80XS	80XS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 320-15ABR Touch-MT 80XT	80XT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 320-14AST-MT 80XU	80XU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 320-15AST-MT 80XV	80XV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 320-17AST-MT 80XW	80XW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V720-14-MT 80Y1	80Y1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo YOGA 920-13IKB-MT 80Y7	80Y7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo YOGA 920-13IKB Glass-MT 80Y8	80Y8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 320S-15ISK-MT 80Y9	80Y9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 320S-15ABR-MT 80YA	80YA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 320S-15AST-MT 80YB	80YB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 320-14IKB-MT 80YD	80YD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

Lenovo ideapad 320-15IKB-MT 80YE	80YE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 320-14IKB(Brazil)-MT 80YF	80YF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 320-14IKB(Brazil)-MT 80YG	80YG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 320-15IKB(Brazil)-MT 80YH	80YH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 320-15IKB(Brazil)-MT 80YJ	80YJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 520-15IKB-MT 80YL	80YL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 710S Plus Touch-13IKB-MT 80YQ	80YQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 320S-14IKB(Brazil)-MT 81A1	81A1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 320-14IAP(Brazil)-MT 81A2	81A2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 320-15IAP(Brazil)-MT 81A3	81A3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo YOGA 330-11IGM-MT 81A6	81A6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo FLEX 6-11IGM-MT 81A7	81A7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 720S-13IKB-MT 81A8	81A8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 720S-15IKB-MT 81AC	81AC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo N24-MT 81AF	81AF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 720-15IKB-MT 81AG	81AG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility



Lenovo V320-MT 81AH	81AH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 320S-13IKB-MT 81AK	81AK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V730-13-MT 81AV	81AV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V330-MT 81AW	81AW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V330-MT 81AX	81AX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V330-MT 81AY	81AY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V330-MT 81B0	81B0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V330-14ARR-MT 81B1	81B1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo YOGA 720-12IKB-MT 81B5	81B5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo MIIX 325-10ICR-MT 81B9	81B9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 720S-14IKB-MT 81BD	81BD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 520-15IKB-MT 81BF	81BF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 320-15IKB-MT 81BG	81BG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 320-15IKB Touch-MT 81BH	81BH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 320-17IKB-MT 81BJ	81BJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 520S-14IKB-MT 81BL	81BL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

Lenovo ideapad 320S-14IKB-MT 81BN	81BN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 320S-15IKB-MT 81BQ	81BQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 720S-13ARR-MT 81BR	81BR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 320-15IKB-MT 81BT	81BT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 720S-13IKB-MT 81BV	81BV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo YOGA 720-13IKB-MT 81C3	81C3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo YOGA C930-13IKB-MT 81C4	81C4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 720-15IKB-MT 81C7	81C7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad FLEX 5-1470-MT 81C9	81C9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad FLEX 5-1570-MT 81CA	81CA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo B320-14IKB-MT 81CC	81CC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo MIIX 520-12IKB-MT 81CG	81CG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V320-MT 81CN	81CN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 720S Touch-15IKB-MT 81CR	81CR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo YOGA 730-13IKB-MT 81CT	81CT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo YOGA 730-15IKB-MT 81CU	81CU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

Lenovo ideapad 2in1 14-MT 81CW	81CW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 2in1 11-MT 81CX	81CX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo 100e-MT 81CY	81CY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 330-14IGM-MT 81D0	81D0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 330-15IGM-MT 81D1	81D1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 330-15ARR-MT 81D2	81D2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 330-14AST-MT 81D5	81D5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 330-15AST-MT 81D6	81D6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 330-17AST-MT 81D7	81D7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 330-15IKB-MT 81DC	81DC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 330-15IKB-MT 81DE	81DE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 330-15IKB Touch-MT 81DH	81DH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 330-15IKB Touch-MT 81DJ	81DJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 330-17IKB-MT 81DK	81DK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 330-17IKB-MT 81DM	81DM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo YOGA 530-14IKB-MT 81EK	81EK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

Lenovo ideapad FLEX 6-14IKB-MT 81EM	81EM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo YOGA C930-13IKB Glass-MT 81EQ	81EQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo 100e Chromebook-MT 81ER	81ER	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo 500e Chromebook-MT 81ES	81ES	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 530S-14IKB-MT 81EU	81EU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 530S-15IKB-MT 81EV	81EV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 330-15ICN-MT 81EY	81EY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Miix 630-12Q35-MT 81F1	81F1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 330S-14IKB-MT 81F4	81F4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 330S-15IKB-MT 81F5	81F5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 330S-14AST-MT 81F8	81F8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 330S-15AST-MT 81F9	81F9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 330S-15ARR-MT 81FB	81FB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 330-15IKB-MT 81FD	81FD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 330-15IKB-MT 81FE	81FE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 330-15ICH-MT 81FK	81FK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

Lenovo ideapad 330-17ICH-MT 81FL	81FL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo E41-25-MT 81FS	81FS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo E41-20-MT 81FT	81FT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 320C-15IKB-MT 81FU	81FU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion Y530-15ICH-MT 81FV	81FV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 320C-15IKB-MT 81FX	81FX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo 300e-MT 81FY	81FY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 330-14IKB-MT 81G2	81G2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 320-15IKB-MT 81G3	81G3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo B330-15IKB-MT 81G7	81G7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
330S-15IKB GTX1050-MT 81GC	81GC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo 300e Chromebook-81H0 MT	81H0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 530S-14ARR-MT 81H1	81H1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 130-14AST-MT 81H4	81H4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 130-15AST-MT 81H5	81H5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 130-14IKB-MT 81H6	81H6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

Lenovo ideapad 130-15IKB-Transactional	81H7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo YOGA 530-14ARR-MT 81H9	81H9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad FLEX 6-14ARR-MT 81HA	81HA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion Y730-15ICH-MT 81HD	81HD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion Y740-15ICHg-MT 81HE	81HE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion Y730-17ICH-MT 81HG	81HG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion Y740-17ICHg-MT 81HH	81HH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V130-15IGM-MT 81HL	81HL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V130-14IGM-MT 81HM	81HM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V130-15IKB-MT 81HN	81HN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V130-14IKB-MT 81HQ	81HQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Chromebook C330-MT 81HY	81HY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad S130-11IGM-MT 81J1	81J1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad S130-14IGM-MT 81J2	81J2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad S530-13IWL-MT 81J7	81J7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo YOGA 730-13IWL-MT 81JR	81JR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility



Lenovo YOGA 730-15IWL-MT 81JS	81JS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Chromebook S330-MT 81JW	81JW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
YOGA Chromebook C630-MT 81JX	81JX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V140-15IWL-MT 81K6	81K6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 130S-11IGM-MT 81KT	81KT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad 130S-14IGM-MT 81KU	81KU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion Y530-15ICH-1060-MT 81LB	81LB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion Y7000P-MT 81LD	81LD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion Y7000P-1060-MT 81LF	81LF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad L340-15IWL-MT 81LG	81LG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad L340-15IWLTouch-MT 81LH	81LH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad L340-15IRH Gaming-MT 81LK	81LK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad L340-17IRH Gaming-MT 81LL	81LL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad L340-15API-MT 81LW	81LW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad L340-15APITouch-MT 81LX	81LX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad L340-17API-MT 81LY	81LY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

Lenovo IdeaPad L340-17IWL-MT 81M0	81M0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo B330-15IKBR-MT 81M1	81M1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo 100e 2nd Gen-81M8 MT	81M8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo 300e 2nd Gen-81M9 MT	81M9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo 100e Chromebook 2nd Gen-81MA MT	81MA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo 300e Chromebook 2nd Gen-81MB MT	81MB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo 500e Chromebook 2nd Gen-81MC MT	81MC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad D330-10IGM-MT 81MD	81MD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo S50 Scuderia Ferrari Edition-MT 81MG	81MG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo 14e Chromebook-81MH MT	81MH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo 14w-81MQ MT	81MQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V145-14AST-MT 81MS	81MS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V145-15AST-MT 81MT	81MT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S145-14IWL-MT 81MU	81MU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S145-15IWL-MT 81MV	81MV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S145-14IGM-MT 81MW	81MW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

Lenovo IdeaPad S145-15IGM-MT 81MX	81MX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S145-15AST-MT 81N3	81N3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad C340-14IWL-MT 81N4	81N4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad C340-15IWL-MT 81N5	81N5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad C340-14API-MT 81N6	81N6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S340-14IWL-MT 81N7	81N7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S340-15IWL-MT 81N8	81N8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S340-14IML-MT 81N9	81N9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S340-15IML-MT 81NA	81NA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S340-14API-MT 81NB	81NB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S340-15API-MT 81NC	81NC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S540-14IWL-MT 81ND	81ND	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S540-15IWL-MT 81NE	81NE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S540-14IML-MT 81NF	81NF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S540-15IML-MT 81NG	81NG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S540-14API-MT 81NH	81NH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

Lenovo Legion Y7000 2019-MT 81NS	81NS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S740-15IRH Touch-MT 81NW	81NW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Yoga S740-15IRH-MT 81NX	81NX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S740-15IRH-MT 81NY	81NY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion Y540-17IRH-MT 81Q4	81Q4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion Y545-MT 81Q6	81Q6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Yoga C940-14IIL-MT 81Q9	81Q9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo 100e Chromebook 2nd Gen MTK-81QB MT	81QB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo 300e Chromebook 2nd Gen MTK-81QC MT	81QC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S340-15IWLTouch-MT 81QF	81QF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S340-15APITouch-MT 81QG	81QG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S340-15IMLTouch-MT 81QL	81QL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S540-14IWL Touch-MT 81QX	81QX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S940-14IWL-MT 81R0	81R0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V340-17IWL-81RG MT	81RG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E41-35-MT 81RH	81RH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

Lenovo Legion Y540-15IRH-MT 81RJ	81RJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad C340-14IWL-MT 81RL	81RL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Yoga S740-14IIL-MT 81RM	81RM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Yoga S740-14IIL-MT 81RS	81RS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S740-14IIL-MT 81RT	81RT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S145-15IWL-MT 81S9	81S9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad FLEX-14IWL-MT 81SQ	81SQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad FLEX-15IWL-MT 81SR	81SR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad FLEX-14API-MT 81SS	81SS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S145-14AST-MT 81ST	81ST	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S540-15IWL GTX-MT 81SW	81SW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion Y540-15IRH-MT 81SX	81SX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion Y540-15IRH-PG0-MT 81SY	81SY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion Y7000 2019 PG0-MT 81T0	81T0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion Y545 PG0-MT 81T2	81T2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion Y540-17IRH-PG0-MT 81T3	81T3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

Lenovo Chromebook C340-15-MT 81T9	81T9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Chromebook C340-11-MT 81TA	81TA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Chromebook S340-14-MT 81TB	81TB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Yoga C740-14IML-MT 81TC	81TC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Yoga C740-15IML-MT 81TD	81TD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Yoga C940-15IRH-MT 81TE	81TE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad C340-14IML-MT 81TK	81TK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad C340-15IML-MT 81TL	81TL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad L340-15IRH Gaming-MT 81TR	81TR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Yoga C640-13IML-MT 81UE	81UE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion Y740-15IRH-MT 81UF	81UF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion Y740-17IRH-MT 81UG	81UG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion Y740-15IRHg-MT 81UH	81UH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion Y740-17IRHg-MT 81UJ	81UJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S340-13IML-MT 81UM	81UM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S145-15API-MT 81UT	81UT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility



Lenovo IdeaPad S145-14API-MT 81UV	81UV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S540-14IML Touch-MT 81V0	81V0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Chromebook S340-14 Touch-MT 81V3	81V3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion Y7000 2019 1050-MT 81V4	81V4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
V155-15API-MT 81V5	81V5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S145-15API-MT 81V7	81V7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S145-14IKB-MT 81VB	81VB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S145-15IKB-MT 81VD	81VD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Slim 1-11AST-05-MT 81VR	81VR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Slim 1-14AST-05-MT 81VS	81VS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S150-11IGL-MT 81VT	81VT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 1 14IGL05-MT 81VU	81VU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S340-14IIL-MT 81VV	81VV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S340-15IIL-MT 81VW	81VW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 14ADA05-MT 81W0	81W0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 15ADA05-MT 81W1	81W1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

IdeaPad 3 17ADA05-MT 81W2	81W2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 14ARE05-MT 81W3	81W3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 15ARE05-MT 81W4	81W4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 17ARE05-MT 81W5	81W5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S145-14IIL-MT 81W6	81W6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S145-15IIL-MT 81W8	81W8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 14IML05-MT 81WA	81WA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 15IML05-MT 81WB	81WB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 17IML05-MT 81WC	81WC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 14IIL05-MT 81WD	81WD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 15IIL05-MT 81WE	81WE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 17IIL05-MT 81WF	81WF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 14IGL05-MT 81WH	81WH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S340-14IIL-MT 81WJ	81WJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S340-15IIL-MT 81WL	81WL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 15IGL05-MT 81WQ	81WQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

IdeaPad 3 15IML05-MT 81WR	81WR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Flex 5 14IIL05-MT 81WS	81WS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S145-15IGM-MT 81WT	81WT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad S530-13IML-MT 81WU	81WU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S340-15IILTouch-MT 81WW	81WW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Chromebook S345-14AST-81WX MT	81WX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Flex 5 14IIL05-MT 81X1	81X1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Flex 5-14ARE-05-MT 81X2	81X2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Flex 5 15IIL05-MT 81X3	81X3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 14IKB05-MT 81X4	81X4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 15IKB05-MT 81X5	81X5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 17IKB05-MT 81X6	81X6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 14ITL05-MT 81X7	81X7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 15ITL05-MT 81X8	81X8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S540-13IML-MT 81XA	81XA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S540-13API-MT 81XC	81XC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

Lenovo IdeaPad FLEX-14IML-MT 81XG	81XG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad FLEX-15IML-MT 81XH	81XH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad C340-15IIL-MT 81XJ	81XJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad FLEX-15IIL-MT 81XK	81XK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Yoga C640-13IML LTE-MT 81XL	81XL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S145-15IKB-MT 81XM	81XM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad L3 15IML05-MT 81Y3	81Y3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Gaming 3 15IMH05-MT 81Y4	81Y4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion 5 15IMH05H-MT 81Y6	81Y6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion 5 17IMH05H-MT 81Y8	81Y8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V14-IKB-MT 81YA	81YA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V14-IWL-MT 81YB	81YB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V15-IKB-MT 81YD	81YD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V15-IWL-MT 81YE	81YE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 5 14IIL05-MT 81YH	81YH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 5 15IIL05-MT 81YK	81YK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

IdeaPad 5 14ARE05-MT 81YM	81YM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 5 15ARE05-MT 81YQ	81YQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion 7 15IMH05-MT 81YT	81YT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion 7 15IMHg05-MT 81YU	81YU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion Y740S-15IMH-MT 81YX	81YX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga Slim 7 14IIL05-MT 82A1	82A1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga Slim 7 14ARE05-MT 82A2	82A2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga Slim 7 14ITL05-MT 82A3	82A3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
-	82A4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Slim 7 14ARE05-MT 82A5	82A5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Slim 7 14ITL05-MT 82A6	82A6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga Slim 7 15IIL05-MT 82AA	82AA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga Slim 7 15IMH05-MT 82AB	82AB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga Slim 7 15ITL05-MT 82AC	82AC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Slim 7 15IIL05-MT 82AD	82AD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Slim 7 15IMH05-MT 82AE	82AE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

IdeaPad Slim 7 15ITL05-MT 82AF	82AF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo 5G 14Q8CX05-MT 82AK	82AK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga Duet 7 13IML05-MT 82AS	82AS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Duet 3 10IGL5-MT 82AT	82AT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion 5 15IMH05-MT 82AU	82AU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion 5P 15IMH05H-MT 82AW	82AW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion 5P 15IMH05-MT 82AY	82AY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion 5 15ARH05H-MT 82B1	82B1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Flex 3 11IGL05-MT 82B2	82B2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion 5 17IMH05-MT 82B3	82B3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion 5 15ARH05-MT 82B5	82B5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Flex 5 CB 13IML05-MT 82B8	82B8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 CB 11IGL05-MT 82BA	82BA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Flex 3 CB 11IGL05-MT 82BB	82BB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion S7 15IMH5-MT 82BC	82BC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E41-45-82BF MT 2020	82BF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility



Yoga 9 14ITL5-MT 82BG	82BG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga 7 14ITL5-MT 82BH	82BH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga 7 15ITL5-MT 82BJ	82BJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 15IML05-MT 82BS	82BS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 15IGL05-MT 82BU	82BU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 CB 14IGL05-MT 82C1	82C1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V14-IGL-MT 82C2	82C2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V15-IGL-MT 82C3	82C3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V14-IIL-MT 82C4	82C4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V15-IIL-MT 82C5	82C5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V14-ADA-MT 82C6	82C6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V15-ADA-MT 82C7	82C7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo 100e Chromebook 2nd Gen AST-82CD MT 2020	82CD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo 300e Chromebook 2nd Gen AST-82CE MT 2020	82CE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion 5 15IMH05H-MT 82CF	82CF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Gaming 3 15IMH05-MT 82CG	82CG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

IdeaPad Creator 5 15IMH05-MT 82D4	82D4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga 9 15IMH5-MT 82DE	82DE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S145-15IIL-MT 82DJ	82DJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S540-13ARE-MT 82DL	82DL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V14-ARE-MT 82DQ	82DQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga Creator 7 15IMH05-MT 82DS	82DS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga Duet IML 2020-MT 82E9	82E9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion C7 15IMH05-MT 82EH	82EH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Ducati 5-MT 82ES	82ES	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Gaming 3 15ARH05-MT 82EY	82EY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 5 14ITL05-MT 82FE	82FE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 5 15ITL05-MT 82FG	82FG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E41-55-82FJ MT 2020	82FJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga 6 13ARE05-MT 82FN	82FN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga Slim 7 Pro 14ITL5-82FX - Yoga Slim 7 Pro 14ITL5	82FX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Flex 3 11ADA05-MT 82G4	82G4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

Lenovo 100e 2nd Gen-82GJ MT 2020	82GJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo 300e 2nd Gen-82GK MT 2020	82GK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion 5 17ARH05H-MT 82GN	82GN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Legion 5P 15ARH05H-MT 82GU	82GU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 1 11ADA05-MT 82GV	82GV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 1 14ADA05-MT 82GW	82GW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V17-IIL-MT 82GX	82GX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo ideapad D330-10IGL-82H0 MT 2020	82H0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo IdeaPad S540-13ITL-MT 82H1	82H1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 CB 11AST5-MT 82H4	82H4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 14ITL6-MT 82H7	82H7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 15ITL06-MT 82H8	82H8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 17ITL6-MT 82H9	82H9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Flex 3 CB 11M735-MT 82HG	82HG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Duet 3 10IGL5-LTE-MT 82HK	82HK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad L3 15ITL6-MT 82HL	82HL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

Lenovo Legion S7 15ARH5-82HM - Lenovo Legion S7 15ARH5	82HM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Flex 5 14ITL05-82HS - IdeaPad Flex 5 14ITL05	82HS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Flex 5 15ITL05-82HT - IdeaPad Flex 5 15ITL05	82HT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Flex 5 14ALC05-82HU - IdeaPad Flex 5 14ALC05	82HU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Flex 5 15ALC05-82HV - IdeaPad Flex 5 15ALC05	82HV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
E41-50-82HW MT 2020	82HW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
100w AMD G3-82HY - 100w Gen 3	82HY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
100w AMD G3-82J0 - 100w Gen 3	82J0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
300w AMD G3-82J1 - 300w Gen 3	82J1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
300w AMD G3-82J2 - 300w Gen 3	82J2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
500w G3-82J3 - 500w Gen 3	82J3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
500w G3-82J4 - 500w Gen 3	82J4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
100e AMD G3-82J7 - 100e Gen 3	82J7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
100e AMD G3-82J8 - 100e Gen 3	82J8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
300e AMD 3rd Generation-82J9 - 300e Gen 3	82J9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
300e AMD 3rd Generation-82JA - 300e Gen 3	82JA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

500e G3-82JB - 500e Gen 3	82JB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
500e G3-82JC - 500e Gen 3	82JC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Legion 5 Pro 16ITH6H-82JD - Legion 5 Pro 16ITH6H	82JD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Legion 5 Pro 16ITH6-82JF - Legion 5 Pro 16ITH6	82JF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Legion 5 15ITH6H-82JH - Legion 5 15ITH6H	82JH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Legion 5 15ITH6-82JK - Legion 5 15ITH6	82JK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Legion 5 17ITH6H-82JM - Legion 5 17ITH6H	82JM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Legion 5 17ITH6-82JN - Legion 5 17ITH6	82JN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Legion 5 Pro 16ACH6H-82JQ - Legion 5 Pro 16ACH6H	82JQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Legion 5 Pro 16ACH6-82JS - Legion 5 Pro 16ACH6	82JS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Legion 5 15ACH6H-82JU - Legion 5 15ACH6H	82JU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Legion 5 15ACH6-82JW - Legion 5 15ACH6	82JW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Legion 5 17ACH6H-82JY - Legion 5 17ACH6H	82JY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Legion 5 17ACH6-82K0 - Legion 5 17ACH6	82K0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Gaming 3 15IHU6-82K1 - IdeaPad Gaming 3 15IHU6	82K1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Gaming 3 15ACH6-82K2 - IdeaPad Gaming 3 15ACH6	82K2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility



Legion 7 16ITHg6-82K6 - Legion 7 16ITHg6	82K6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Legion S7 15ACH6-82K8 - Legion S7 15ACH6	82K8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V14-ITL-82KA - Lenovo V14-ITL	82KA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V15-ITL-82KB - Lenovo V15-ITL	82KB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V14 G2 ALC-82KC - Lenovo V14-ALC	82KC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V15 G2 ALC-82KD - Lenovo V15-ALC	82KD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 4G 14Q8C05-82KE - IdeaPad 4G 14Q8C05	82KE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 5G 14Q8X05-82KF - IdeaPad 5G 14Q8X05	82KF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IP Flex 3 Chrome 11M836-82KM - IP Flex 3 Chrome 11M836	82KM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 Chrome 14M836-82KN - IdeaPad 3 Chrome 14M836	82KN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 14ADA6-82KQ - IdeaPad 3 14ADA6	82KQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 15ADA6-82KR - IdeaPad 3 15ADA6	82KR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 17ADA6-82KS - IdeaPad 3 17ADA6	82KS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 14ALC6-82KT - IdeaPad 3 14ALC6	82KT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 15ALC6-82KU - IdeaPad 3 15ALC6	82KU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 17ALC6-82KV - IdeaPad 3 17ALC6	82KV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility



IdeaPad 5 Pro 14ITL6-82L3 - IdeaPad 5 Pro 14ITL6	82L3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 5 Pro 16ACH6-82L5 - IdeaPad 5 Pro 16ACH6	82L5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Creator 5 16ACH6-82L6 - IdeaPad Creator 5 16ACH6	82L6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 5 Pro 14ACN6-82L7 - IdeaPad 5 Pro 14ACN6	82L7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 5 Pro 16IHU6-82L9 - IdeaPad 5 Pro 16IHU6	82L9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga Slim 7 Pro 14ARH5-82LA - Yoga Slim 7 Pro 14ARH5	82LA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 5 14ALC05-82LM - IdeaPad 5 14ALC05	82LM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 5 15ALC05-82LN - IdeaPad 5 15ALC05	82LN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo 100e 2nd Gen_BRL-82LR MT 2020	82LR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo 100e Chromebook 2nd Gen AST_BRL-82LS MT 2020	82LS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Flex 5 14ITL05-82LT - IdeaPad Flex 5 14ITL05	82LT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga 9 14IAP7-82LU - Yoga 9 14IAP7	82LU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 1 14IJL7-82LV - IdeaPad 1 14IJL7	82LV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga 7 14ITL5-82LW - Yoga 7 14ITL5	82LW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 1 15IJL7-82LX - IdeaPad 1 15IJL7	82LX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
14e Chrome G2-82M1 - 14e Chromebook Gen 2	82M1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

14e Chrome G2-82M2 - 14e Chromebook Gen 2	82M2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IP Flex 5 Chrome 13ITL6-82M7 - IP Flex 5 Chrome 13ITL6	82M7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 5 Chrome 14ITL6-82M8 - IdeaPad 5 Chrome 14ITL6	82M8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 15ITL06-82MD - IdeaPad 3 15ITL6	82MD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V15 G2 ITL(Brazil)-MT 82ME - V15-ITL(Brazil)	82ME	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 15ALC6-82MF - IdeaPad 3 15ALC6	82MF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Gaming 3 15IHU6-82MG - IdeaPad Gaming 3 15IHU6	82MG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Legion 5 15ITH6H-82MH - Legion 5 15ITH6H	82MH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Gaming 3 15ACH6-82MJ - IdeaPad Gaming 3 15ACH6	82MJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga Slim 7 Pro 14ACH5-82MS - Yoga Slim 7 Pro 14ACH5	82MS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 Chrome 14APO6-MT 82MY	82MY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IP Flex 3 Chrome 11IJL6-82N3 - IP Flex 3 Chrome 11IJL6	82N3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 Chrome 15IJL6-82N4 - IdeaPad 3 Chrome 15IJL6	82N4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga Slim 7 Pro 14ACH5 O-82N5 - Yoga Slim 7 Pro 14ACH5 O	82N5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Legion 7 16ACHg6-82N6 - Legion 7 16ACHg6	82N6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga 7 14ACN6-82N7 - Yoga 7 14ACN6	82N7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

14w G2-82N8 - 14w Gen 2	82N8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
14w G2-82N9 - 14w Gen 2	82N9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V14 G1 IML-82NA - Lenovo V14 G1 IML	82NA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V15 G1 IML-82NB - Lenovo V15 G1 IML	82NB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga Slim 7 Pro 14IHU5-82NC - Yoga Slim 7 Pro 14IHU5	82NC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga 6 13ALC6-82ND - Yoga 6 13ALC6	82ND	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga Slim 7 Pro 14IHU5 O-82NH - Yoga Slim 7 Pro 14IHU5 O	82NH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga Slim 7 Pro 14ACH5 D-82NJ - Yoga Slim 7 Pro 14ACH5 D	82NJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga Slim 7 Pro 14ACH5 OD-82NK - Yoga Slim 7 Pro 14ACH5 OD	82NK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Legion 5 15IMH6-82NL - Legion 5 15IMH6	82NL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V14 G2 ITL(Brazil)-82NM - Lenovo V14-ITL Brazil	82NM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V15-IGL(Brazil)-82NN - Lenovo V15-IGL(Brazil)	82NN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V15 G1 IML(Brazil)-82NQ - Lenovo V15 G1 IML(Brazil)	82NQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Legion 5 15ACH6A-82NW - Legion 5 15ACH6A	82NW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V17 G2 ITL-82NX - Lenovo V17 G2 ITL	82NX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo 100e Chromebook 2nd Gen MTK 2-82Q3 - Lenovo 100e Chrome 2nd Gen MTK 2	82Q3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

IdeaPad 1 14IAU7-82QC - IdeaPad 1 14IAU7	82QC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 1 15IAU7-82QD - IdeaPad 1 15IAU7	82QD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga 7 14IAL7-82QE - Yoga 7 14IAL7	82QE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga 7 14ARB7-82QF - Yoga 7 14ARB7	82QF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga 7 16IAP7-82QG - Yoga 7 16IAP7	82QG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Legion 5 15ACH6-82QJ - Legion 5 15ACH6	82QJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga Slim 7 Pro 16ACH6-82QQ - Yoga Slim 7 Pro 16ACH6	82QQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Slim 7 Pro 16ACH6-82QR - IdeaPad Slim 7 Pro 16ACH6	82QR	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Slim 7 Pro 14IHU5-82QT - IdeaPad Slim 7 Pro 14IHU5	82QT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V14 G2 IJL-82QX - Lenovo V14 G2 IJL	82QX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V15 G2 IJL-82QY - Lenovo V15 G2 IJL	82QY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 1 14ADA7-82R0 - IdeaPad 1 14ADA7	82R0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 1 15ADA7-82R1 - IdeaPad 1 15ADA7	82R1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 1 14ALC7-82R3 - IdeaPad 1 14ALC7	82R3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 1 15ALC7-82R4 - IdeaPad 1 15ALC7	82R4	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Flex 5 14IAU7-82R7 - IdeaPad Flex 5 14IAU7	82R7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

IdeaPad Flex 5 16IAU7-82R8 - IdeaPad Flex 5 16IAU7	82R8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Flex 5 14ALC7-82R9 - IdeaPad Flex 5 14ALC7	82R9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Flex 5 16ALC7-82RA - IdeaPad Flex 5 16ALC7	82RA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Legion 5 15IAH7H-82RB - Legion 5 15IAH7H	82RB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Legion 5 15IAH7-82RC - Legion 5 15IAH7	82RC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Legion 5 15ARH7H-82RD - Legion 5 15ARH7H	82RD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Legion 5 15ARH7-82RE - Legion 5 15ARH7	82RE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Legion 5 Pro 16IAH7H-82RF - Legion 5 Pro 16IAH7H	82RF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Legion 5 Pro 16ARH7H-82RG - Legion 5 Pro 16ARH7H	82RG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 14IAU7-82RJ - IdeaPad 3 14IAU7	82RJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 15IAU7-82RK - IdeaPad 3 15IAU7	82RK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 17IAU7-82RL - IdeaPad 3 17IAU7	82RL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 14ABA7-82RM - IdeaPad 3 14ABA7	82RM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 15ABA7-82RN - IdeaPad 3 15ABA7	82RN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 3 17ABA7-82RQ - IdeaPad 3 17ABA7	82RQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Legion 5 Pro 16ARH7-82RY - Legion 5 Pro 16ARH7	82RY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility



Legion 5 Pro 16IAH7-82S0 - Legion 5 Pro 16IAH7	82S0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
13w Yoga-82S1 - 13w Yoga	82S1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
13w Yoga-82S2 - 13w Yoga	82S2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Gaming 3 15IAH7-82S9 - IdeaPad Gaming 3 15IAH7	82S9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Gaming 3 16IAH7-82SA - IdeaPad Gaming 3 16IAH7	82SA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Gaming 3 15ARH7-82SB - IdeaPad Gaming 3 15ARH7	82SB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Gaming 3 16ARH7-82SC - IdeaPad Gaming 3 16ARH7	82SC	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 5 14IAL7-82SD - IdeaPad 5 14IAL7	82SD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 5 14ABA7-82SE - IdeaPad 5 14ABA7	82SE	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 5 15IAL7-82SF - IdeaPad 5 15IAL7	82SF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 5 15ABA7-82SG - IdeaPad 5 15ABA7	82SG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 5 Pro 14IAP7-82SH - IdeaPad 5 Pro 14IAP7	82SH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 5 Pro 14ARH7-82SJ - IdeaPad 5 Pro 14ARH7	82SJ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 5 Pro 16IAH7-82SK - IdeaPad 5 Pro 16IAH7	82SK	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 5 Pro 16ARH7-82SN - IdeaPad 5 Pro 16ARH7	82SN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga Slim 7 Pro 14IAP7-82SV - Yoga Slim 7 Pro 14IAP7	82SV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility



Lenovo Slim 7 14IAP7-82SX - Lenovo Slim 7 14IAP7	82SX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Flex 3 Chrome 15IJL7- 82T3 - IdeaPad Flex 3 Chrome 15IJL7	82T3	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IP Flex 5 Chrome 14IAU7-82T5 - IP Flex 5 Chrome 14IAU7	82T5	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Legion 7 16IAX7-82TD - Legion 7 16IAX7	82TD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Legion S7 16IAH7-82TF - Legion S7 16IAH7	82TF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga Slim 7 ProX 14ARH7-82TL - Yoga Slim 7 ProX 14ARH7	82TL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad Duet 5 12IAU7-82TQ - IdeaPad Duet 5 12IAU7	82TQ	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V14 G3 IAP-82TS - Lenovo V14 G3 IAP	82TS	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V15 G3 IAP-82TT - Lenovo V15 G3 IAP	82TT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V14 G3 ABA-82TU - Lenovo V14 G3 ABA	82TU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V15 G3 ABA-82TV - Lenovo V15 G3 ABA	82TV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo S14 G3 IAP-82TW - Lenovo S14 G3 IAP	82TW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V17 G3 IAP-82U1 - Lenovo V17 G3 IAP	82U1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga 6 13ALC7-82UD - Yoga 6 13ALC7	82UD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga 7 16IAH7-82UF - Yoga 7 16IAH7	82UF	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Legion S7 16ARHA7-82UG - Legion S7 16ARHA7	82UG	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

Legion 7 16ARHA7-82UH - Legion 7 16ARHA7	82UH	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V14 G3 IAP(Brazil)-82UL - Lenovo V14 G3 IAP(Brazil)	82UL	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V15 G3 IAP(Brazil)-82UM - Lenovo V15 G3 IAP(Brazil)	82UM	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo V14 G3 ABA(Brazil)-82UN - Lenovo V14 G3 ABA(Brazil)	82UN	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga Slim 7 Pro 14IAH7-82UT - Yoga Slim 7 Pro 14IAH7	82UT	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga Slim 7 Pro 14ARH7-82UU - Yoga Slim 7 Pro 14ARH7	82UU	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Slim 7 14ARH7-82UV - Lenovo Slim 7 14ARH7	82UV	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga Slim 7 Pro 16ARH7-82UW - Yoga Slim 7 Pro 16ARH7	82UW	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Slim 7 16ARH7-82UX - Lenovo Slim 7 16ARH7	82UX	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
100e G3-82UY - 100e Gen 3	82UY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
100e G3-82V0 - 100e Gen 3	82V0	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Slim 7 ProX 14IAH7-82V1 - Lenovo Slim 7 ProX 14IAH7	82V1	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Slim 7 ProX 14ARH7-82V2 - Lenovo Slim 7 ProX 14ARH7	82V2	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 1 14IGL7-82V6 - IdeaPad 1 14IGL7	82V6	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 1 15IGL7-82V7 - IdeaPad 1 15IGL7	82V7	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 5 Chrome 16IAU7-82V8 - IdeaPad 5 Chrome 16IAU7	82V8	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility

IdeaPad 5 Chrome 16IAU7-82V9 - IdeaPad 5 Chrome 16IAU7	82V9	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga Slim 7 Pro 16IAH7-82VA - Yoga Slim 7 Pro 16IAH7	82VA	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Lenovo Slim 7 16IAH7-82VB - Lenovo Slim 7 16IAH7	82VB	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
Yoga 7 14IAL7-82VD - Yoga 7 14IAL7	82VD	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility
IdeaPad 1 15IAU7-82VY - IdeaPad 1 15IAU7	82VY	Need to mount on the Monitor and connect to Monitor USB hub first, check the sheet “Monitors(Commercial)” for monitor compatibility